

KRX 4 Dual Battery Kit Directions




Tools Needed:

- Power Drill
- Drill Bit
- Ratchet
- 14mm Socket
- 12mm Socket
- 10mm Socket
- 8mm Socket
- 3/16" Drill Bit
- 12mm Socket
- Side Cutters

Remove Rear Top & Bottom Seat Cushions



Use 14MM & 12MM Sockets to remove rear seat frames

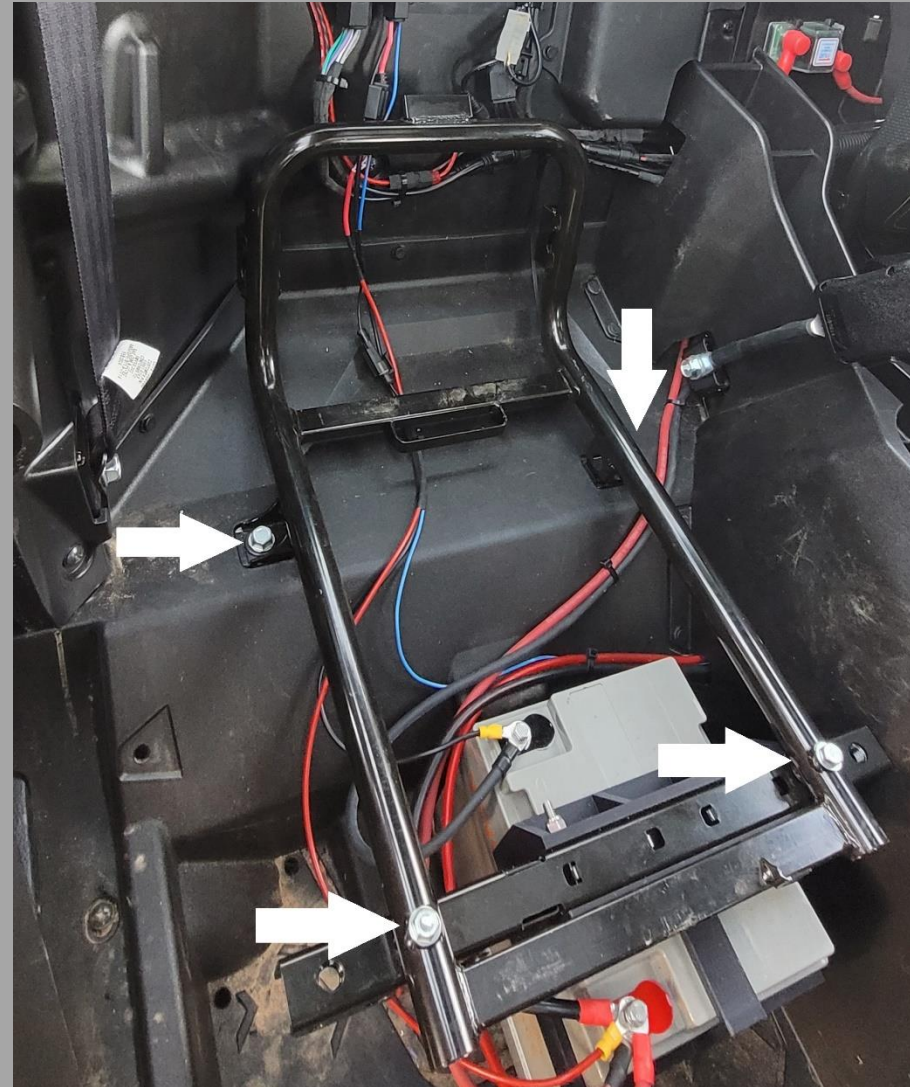

- Remove Air Filter Cover
- Hold Trueam Charger in place to mark areas to drill
(remember to mark at top & bottom of charger but in front of bolt sections)
- Once marked use 3/16" drill bit to make mounting holes
- Use 2 zip ties to slip through mounting holes and secure charger to back wall



- Run charger wiring behind main chassis loom and use 10mm to bolt wire to chassis ground



- Slide 2nd battery in-between seat frame sections with the Positive/Ground facing like in the picture.
- Use 11mm socket & 11mm wrench to bolt battery brackets in place to hold 2nd battery in place.
- (Bolt washers will go under bolt head and under locknut)



❑ Run power cable (shorter red wire) from Aux side of charger to Positive side of 2nd battery.

❑ Then will need to run ground black cable from 2nd battery to chassis ground where charger is also tied to.

❑ When running wire go from openings on D/S of center console to P/S opening where seat belt buckle is.



❑ Bolts on 2nd battery are 10mm.

❑ Use 3\16" drill bit to drill in plastic to secure power/ground power wires in place like in picture shown.